

# COTTON CANDY MACHINE

Item # 1604

845.226.2447

## OPERATION INSTRUCTIONS:

1. WITH THE MAIN SWITCH OFF, FILL THE FLOSS HEAD 90% FULL WITH SUGAR.
2. TURN MAIN SWITCH AND HEAT SWITCH TO "ON"
3. TURN THE HEAT CONTROL KNOB TO THE MAXIMUM SETTING TO INITIATE THE FASTEST POSSIBLE WARM UP.
4. MACHINE WILL START MAKING FLOSS IN ABOUT 45 SECONDS. WHEN THE UNIT BEGINS MAKING COTTON CANDY, YOU MUST REDUCE THE HEAT SETTING. TURN THE CONTROL KNOB TO THE ONE O'CLOCK POSITION TO ELIMINATE ANY SMOKING.
5. PICK A CONE BY GENTLY TWISTING IT OFF THE STACK OF CONES.
6. WITH A LIGHT FLICKING ACTION, ROLL THE CONE IN THE WEB OF FLOSS WHILE BUILDING UP IN THE TUB. LIFT THE CONE UP WITH THE RING OF FLOSS ATTACHED AND ROTATE TO WRAP THE FLOSS. **\*\*TIP: DO NOT ROLL THE FLOSS WHILE THE CONE IS IN THE TUB! THIS WILL PACK THE FLOSS TOO TIGHTLY**
7. IF THE FLOSS FAILS TO STICK TO THE CONE, PASS THE CONE NEAR THE SPINNER HEAD TO PICK UP A STARTER OF MELTED SUGAR.

**CLEAN UP:** POUR REMAINING FLOSS FROM THE CENTER HOLE IN BASE. SHAKE UPSIDE DOWN TO GET AS MUCH OUT AS YOU CAN. WIPE THE OUTSIDE OF THE UNIT WITH A HOT SOAPY RAG TO REMOVE ANY STICKY RESIDUE. WIPE CLEAN. REMOVE THE PLASTIC MESH AND CLIPS FROM THE TUB AND RINSE MESH AND TUB WITH HOT, SOAPY WATER UNTIL NO MORE SUGAR REMAINS. RINSE CLIPS SEPARATELY. DRY IMMEDIATELY AFTER WASHING.

- DO NOT USE ANYTHING TO POKE INTO SCRAPE INTERIOR OF BASE
- DO NOT POUR LIQUID INTO BASE
- DO NOT SUBMERSE BASE IN WATER – IT IS ELECTRICAL!!!
- DO NOT USE CHEMICAL CLEANER ON ANY METAL PIECES – IT MAY BE CORROSIVE
- DO NOT USE ANY CHEMICAL CLEANERS ON TUB OR MESH



## POWER REQUIREMENTS:



Dedicated 20 AMP Circuit.

\*\* Be Sure that nothing else is plugged into the same circuit

## SPACE REQUIREMENTS:



19"W x 12"D x 21"H



## OPTIONAL EQUIPMENT:

Cotton Candy Cart



## OTHER REQUIREMENTS:

Floss sugar, paper cones

**WARNING!! FLOSS HEAD ROTATES AT 3450 RPM!! OPERATOR MUST KEEP HANDS AND FACE CLEAR OF THE FLOSS HEAD AND KEEP SPECTATORS AT A REASONABLE DISTANCE.**


**CAUTION: BEFORE TURNING THE MACHINE OFF, LET THE MOTOR SPIN FOR ABOUT 45 SECONDS WITH THE HEAT SWITCH TURNED OFF.**

# COTTON CANDY MACHINE

Item # 1604

845.226.2447

## Installation of Floss Stabilizer

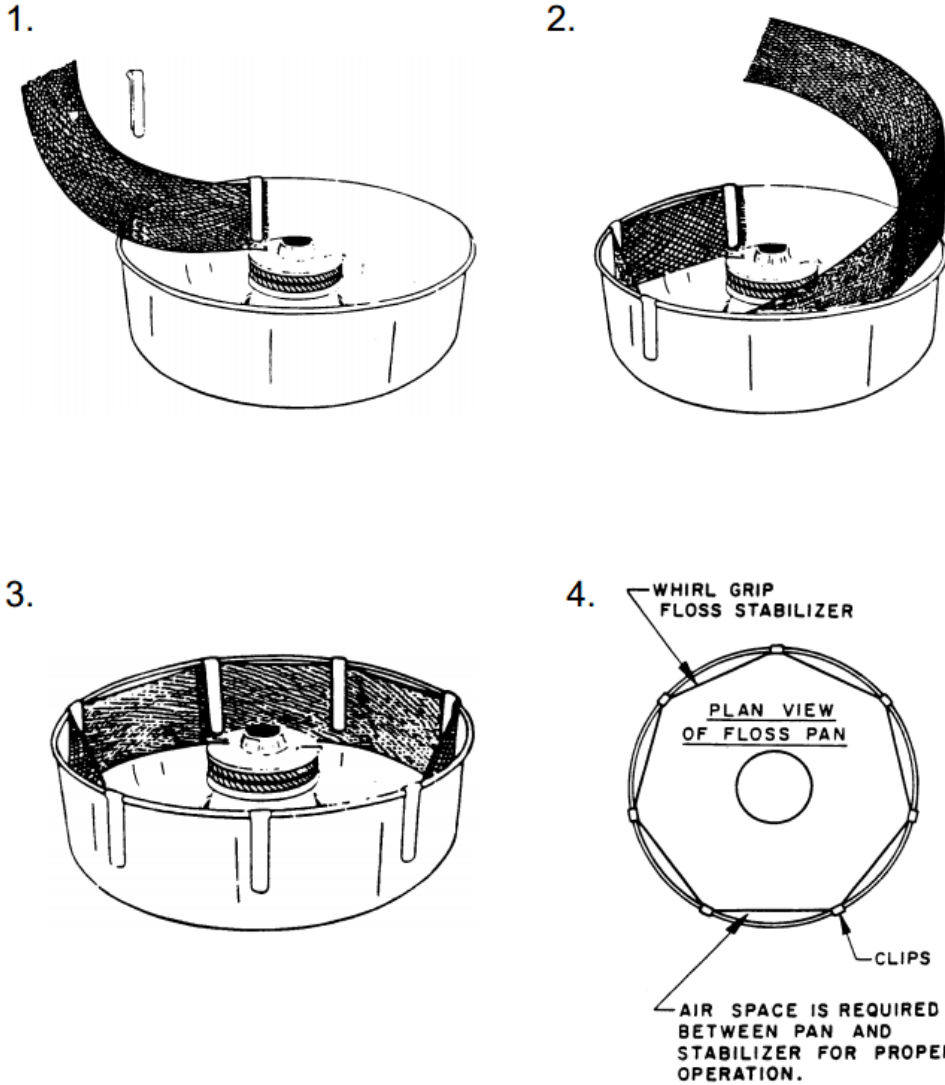

**POWER REQUIREMENTS:**  
 Dedicated 20 AMP Circuit.  
 \*\* Be Sure that nothing else is plugged into the same circuit

**SPACE REQUIREMENTS:**  
 19"W x 12"D x 21"H

**OPTIONAL EQUIPMENT:**  
 Cotton Candy Cart

**OTHER REQUIREMENTS:**  
 Floss sugar, paper cones

Click below to view the full manufacturer's instructions and troubleshooting [Instructions](#)