

DLP COMPUTER PROJECTOR 3700

Item # 1094

845.226.2447

Powering On the Projector:

1. Remove the projector lens cap.
2. Connect the AC power cord to an outlet and VGA cable from the projector to your computer
3. Press power button to turn on the projector. The projector takes a minute or so to warm up.
4. Turn on your source (computer, notebook, DVD, etc.). The projector automatically detects your source.
5. The height of the projector can be adjusted using the screwable legs on the bottom of the machine
5. If you require sound, a separate speaker would need to be rented
6. When turning the projector off, you need to click the power button once and then click and hold it a second time.
7. **IMPORTANT!** Do not move the projector until you hear the fan has stopped and there is no more noise



POWER REQUIREMENTS:

Dedicated 20 AMP Circuit.

** Be Sure that nothing else is plugged into the same circuit



SPACE REQUIREMENTS:

H: 4.5 " x W: 11.0" x D: 8.6"
Weight 6.1 lbs.



OPTIONAL EQUIPMENT:

Projector Screen



OTHER REQUIREMENTS:

VGA Cord

Please visit
our website
or click
below for the

[Full
Instruction
Manual](#)